



**Action Taken When the Fault Code is Active:**

- The ECM illuminates the amber CHECK ENGINE lamp and/or the Malfunction Indicator Lamp (MIL) immediately when the diagnostic runs and fails.

**Conditions for Clearing the Fault Code:**

It is necessary to use the "Reset All Faults" command in INSITE™ electronic service tool to clear this fault and extinguish the amber CHECK ENGINE lamp and/or Malfunction Indicator Lamp (MIL).

**Shop Talk:**

This fault code is intended to identify fueling quantity and timing issues.

**Refer to Troubleshooting Fault Code 1141.**

Copyright Cummins Inc.